



# HUGRO®

Qualität aus Waldkirch



Montageanleitung für Progress EMC Serie 107.85


Assembly Instruction for Progress EMC Serie 107.85

## Montageanleitung


### Progress-E

Das Unterteil (Pos. 5) der Kabelverschraubung in das vorgesehene Gehäuse einschrauben. Den Kabelaussenmantel und Kabelschirm auf die gewünschte Länge zurückschneiden.


Druckmutter (Pos. 1), Dichtungseinsatz (Pos. 2), Zwischenstück (Pos. 4) und Spannzange (Pos. 3) über das Kabel aufschieben. Kabel mit der Spannzange in das Unterteil einführen und positionieren.

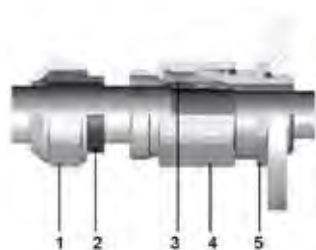

Zwischenstück und Spannzange mit dem Unterteil verschrauben, bis das Kabel fühlbar geklemmt wird, anschließend festziehen.

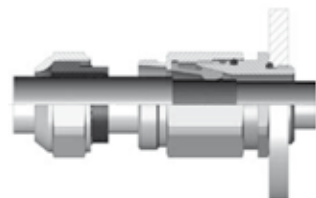

Druckmutter mit dem Zwischenstück verschrauben, bis der Dichtungseinsatz zwischen Druckmutter und Kabel einen kleinen Wulst bildet.

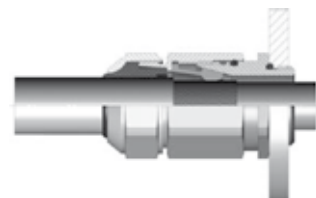

## Assembly instruction

### Progress-E

Screw the lower section (item 5) of the cable gland into the housing. Trim the outer cable sheath and the cable screen to the required length.

Push the compression nut (item 1), the sealing insert (item 2), the adapter (item 4) and the collet (item 3) over the cable. Use the collet to introduce and position the cable in the lower section.

Screw the adapter and the collet onto the lower section until the cable becomes clamped, then tighten the connection.

Screw the compression nut onto the adapter until the sealing insert between the lock nut and the cable forms a small ridge.